## S910 Firmware Updates

Г






٦

Precondition: You need Leica DISTO <sup>™</sup> S910, USB cable and a Windows PC.	
Letica DISTO S910 <sup>TM</sup> Firmware Updates         Mow to flash the firmware on a Leica DISTO <sup>TM</sup> S910 (PDF)         Image: Colspan="2">Colspan="2"         Colspan="2">Colspan="2"       Colspan="2"        Colspan="2" <th< td=""><td>1. Download program from webpage: http://lasers.leica- geosystems.com/leica- disto-S910-Firmware- updates</td></th<>	1. Download program from webpage: http://lasers.leica- geosystems.com/leica- disto-S910-Firmware- updates
ieicadisto_s910_firmexe	2. Execute the update program in order to install and follow instructions.
V1.0	3. Start update program on PC.
	4. Press button ON DIST to switch on device.
	5. Press six buttons in the same order as shown in picture.



## S910 Firmware Updates

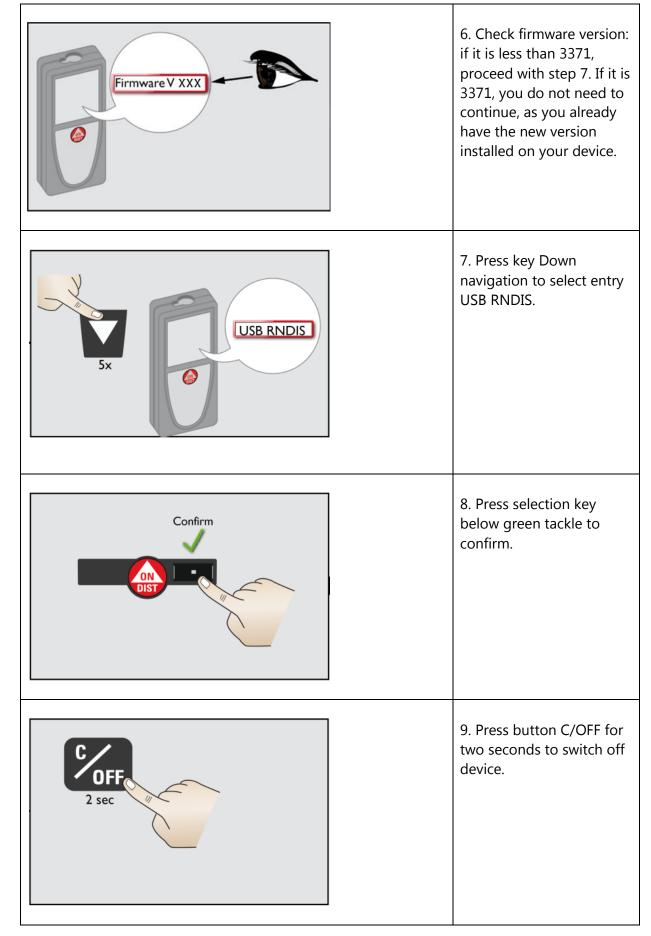





٦

## S910 Firmware Updates

	10. Connect device to laptop/PC via USB cable.
	11. Device switches on automatically. Battery icon appears on screen.
Start	12. Click button start to start installation process.
	<ul> <li>13. A load beam appears on screen. Update process is running for about 10 minutes.</li> <li>Note! Do not disconnect device from laptop/PC during update process! An Error Message 5056 may shortly appear on DISTO<sup>™</sup> display during installation.</li> </ul>
Success	14. If the installation has been successful the message "success" and a green tackle appears on screen.